



DNH^{AS}

**N-3770 Kragerø
NORWAY**
Phone: (47) 35 98 56 00
Fax: (47) 35 98 56 10
E-mail: dnh@dnh.no
Web-site: **www.dnh.no**

**DNH WW Ltd.
England**

Phone:.....(44) 1908 275 000
Fax:.....(44) 1908 275 100
E-mail:.....dnh@dnh.co.uk

**DNH GmbH
Germany**


Phone:.....(49) 040 6569 30-0
Fax:.....(49) 040 6569 30-30
E-mail:.....dnh@dnh.de

**DNH
Speakers Inc.
USA**

Phone:.....(1) 484 494 5790
Fax:.....(1) 484 494 5793
E-mail:.....dnh@dnhspeakers.com


ISO 9001 CERTIFIED

all outside nuts and bolts in stainless steel

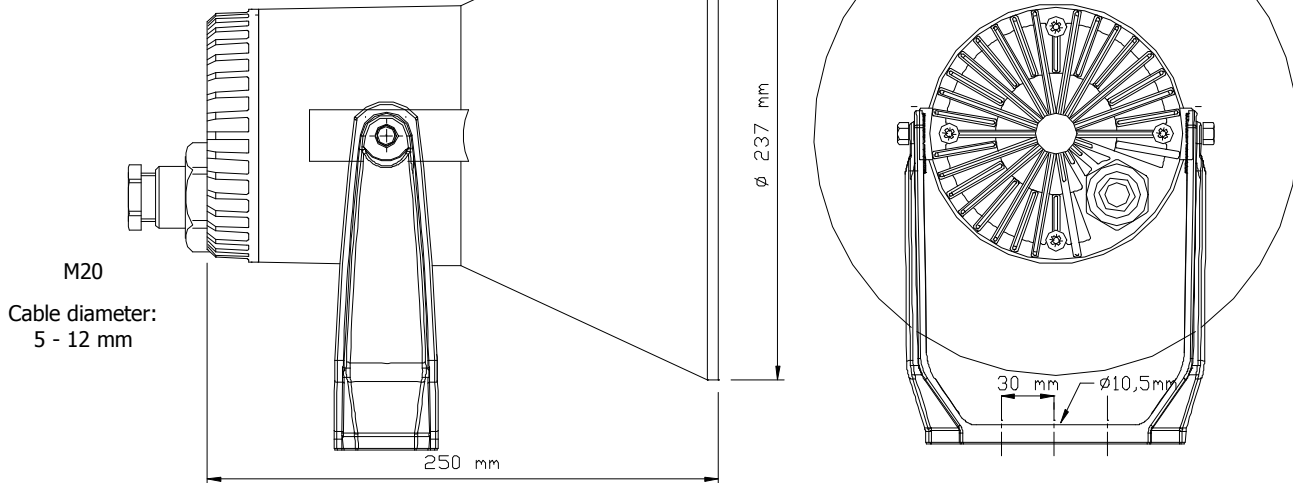

SPL at different frequencies at 1W/1m Sine wave

SPL vs Freq

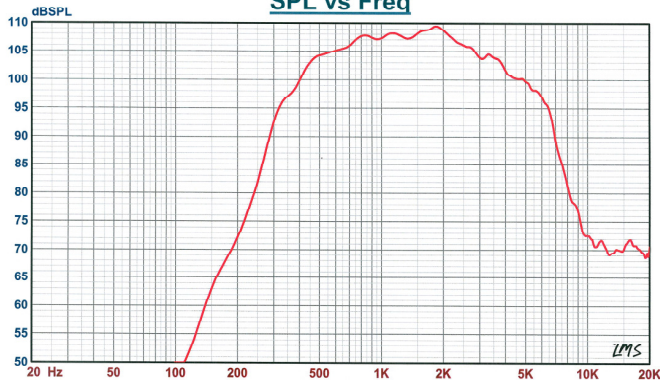

Material / Colour PA/alu.alloy / RAL 7035
Mounting..... Bracket
Termination..... Inside screw terminal
Weight..... 1,9 kg
IP-rating.....67
Max. / min. amb. temp 150 °C / -50 °C
Rated / max. power60 W / 60 W
SPL 1W/1m 110 dB
SPL rated power 126 dB
Effective freq. range..... 310 – 8000 Hz
Dispersion (-6dB) 1kHz / 4kHz..... 115° / 30°
Directivity factor, Q
Options.....Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received. Fasten bracket with 1 - 3 screws.
- To change the position of the loudspeaker please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Fasten lid with a torque of 2 - 3 Nm.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.
- Enter cable through special cable gland and terminate cable.

NB! Not available with transformer. Separate matching transformer can be delivered.

