



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
Fax..... + 47 35 98 56 10
E-mail..... dnh@dnh.no
Web-site..... www.dnh.no

ENGLAND
DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY
DNH GmbH


Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de

BPF-560(T)

USA
DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

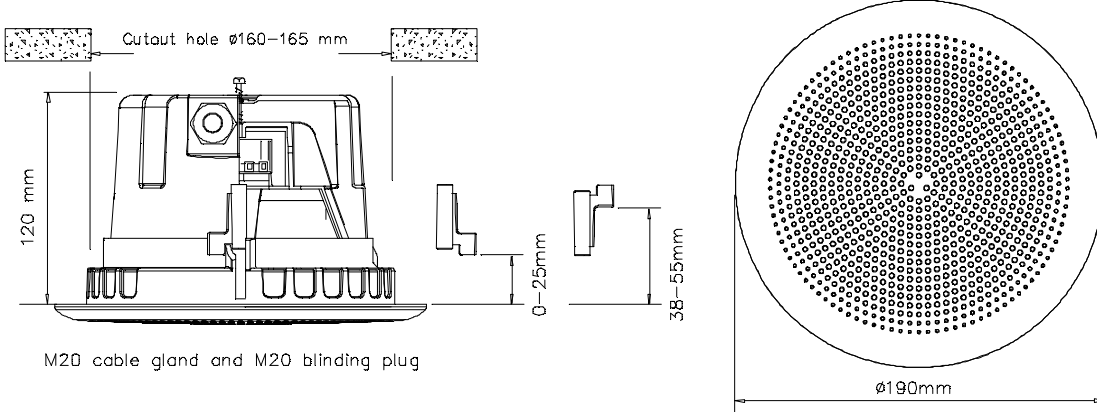


Transformer:
 Combined
 70/100Volt line
 White : Red 100 V
 White : Green 70 V

Secondary nominal
 tapings:
 C : 6 6,0 W
 C : 3 3,0 W
 C : 1,5 1,5 W
 C : 0,5 0,5 W

Sound pressure levels at different frequencies at 1W/1m

P-5/15B SPL vs Freq

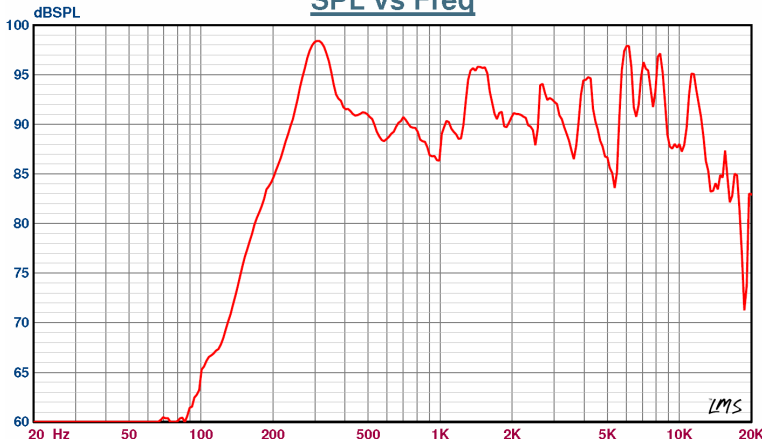

Material / Color PA / ABS / RAL9010
 Mounting Hooks
 Termination Spring clamp
 Weight w/ transformer 0,9 kg
 Max / min amb temp 90°C / -20°C
 Rated / max power 6 W / 10 W
 SPL 1W/1m 90 dB
 SPL rated power 97 dB
 Effective freq range 190 – 20000 Hz
 Options Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Install the ring into the cut-out hole turning the crews connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Lead cable through cable gland and connect to terminal. Screw box back into place with one screw.
- Turn the grill gently clockwise within the ring until it stops.
- Hooks can be mounted both ways, see drawing at top of the page.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Take care when loudspeaker is energized (100V or 70V)
- Do not open loudspeaker when energized.



DNH reserves the right to alter specifications without notice

Rev. 09.11.2011