



ISO 9001 CERTIFIED

DNH^{AS}

N-3770 Kragerø
NORWAY

Phone: (47) 35 98 56 00
Fax: (47) 35 98 56 10
E-mail: dnh@dnh.no
Web-site: www.dnh.no

DNH WW Ltd.
England

Phone:.....(44) 1908 275 000
Fax:.....(44) 1908 275 100
E-mail:.....dnh@dnh.co.uk

DNH
France

Phone:.....(33) 1 5380 0276
Fax:.....(33) 1 4588 1594
E-mail:.....etienne@dnh.no



DNH GmbH
Germany

Phone:.....(49) 040 6569 30-0
Fax:.....(49) 040 6569 30-30
E-mail:.....dnh@dnh.de

DNH
Speakers Inc.
USA

Phone:.....(1) 484 494 5790
Fax:.....(1) 484 494 5793
E-mail:.....dnh@dnhspeakers.com

B-640(T)

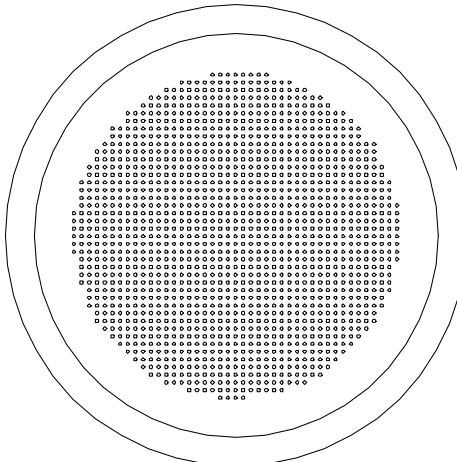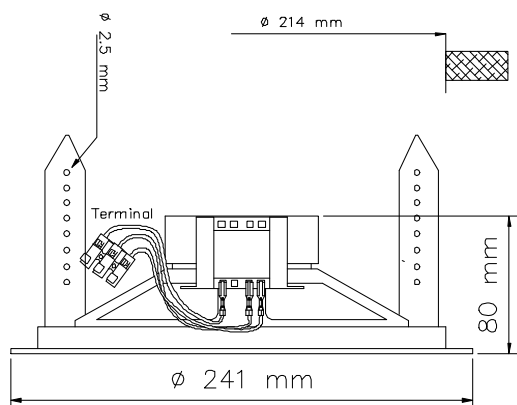

Transformer:

Combined
70 / 100 Volt line
5(White) : 7(Green) 70V
5(White) : 8(Red) 100V

Secondary nominal
tappings:

1 : 4	6,0W
1 : 3	3,0W
2 : 4	2,0W
1 : 2	1,5W
3 : 4	0,9 W
2 : 3	0,5 W

Rec. ceiling hole: \varnothing 215 mm

Sound pressure levels at different frequencies at 1W/1m
1/3 octave pink noise.



Material / Color Aluminium / RAL9010
Mounting 4 metal strips
Termination Spring clamps
Weight 1,2 kg
IP-rating
Max. / min. amb. temp 90°C / -20°C
Standard version 50 / 100 V transformer
Rated / max. power 6 W / 20 W
SPL 1W/1m 90 dB
SPL rated power 97 dB
Effective freq. range 60 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz 140° / 50°
Directivity factor, Q
Options Impedance, color, label

Installation, Operation and Maintenance Procedures

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received.
- Install outer ring into the hole by bending down 4 metal strips. Use nail / screw to prevent the ring from turning. Connect cable to terminal. Screw the loudspeaker grill clockwise into fixed position.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Take care when loudspeaker is energized (100 V).
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.



DNH reserves the right to alter specifications without notice.

Rev. 18.12.2007